

DM1100 ZC DEBURRING MACHINE



GENERAL DESCRIPTION:


DM1100 ZC are deburring and edge rounding machines for sheet metal and parts cut by punching, shearing, laser or plasma.

Removing burrs and creating round edges using cross belts technology is possible on parts up to 11000mm width and on some as small as 50x50mm.

Consistent surface finishing in small or large parts can be also done with abrasive belt and a brush unit (brush unit available on DM1100 ZCK version).

TECHNICAL DATA:

Working capacity (mm)	1100x120 (max. width x thickness)
Feeding speed (m/min.)	0.9 – 13
Cross belts speed (m/s)	8 or 2 - 8
Abrasive belt (mm)	1100x2200
Abrasive + Cross belts motor (kW)	18 + 2x 3
Consumption (A)	53
Dimensions approx. (mm)	3200x2250x2200
Weight approx. (kg)	4000

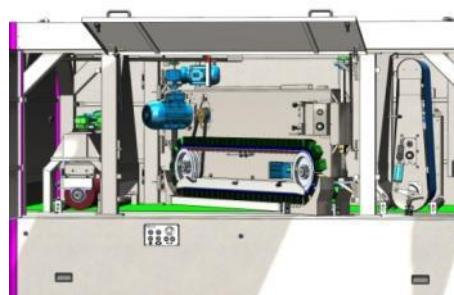

Touchscreen integrated on control panel



35° angled cross belts with motorized pressure and thickness regulation



Deburring and edge rounding small parts